


Gen 2 Raptor Adjustable Spring Perch Collar
Installation Guide SPECIFIC TO 2019 UP RAPTORS

Rev X1

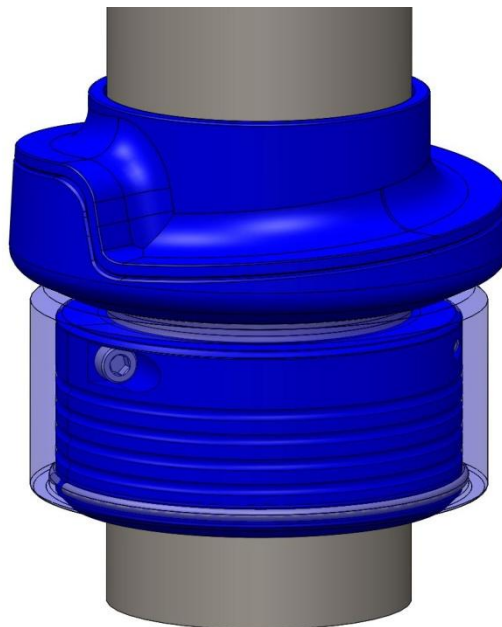

Tech Support: 866-691-7750 ext 2

Install Videos: YouTube "Raptor Performance Group"

COMPLETELY READ INSTALLATION INSTRUCTIONS PRIOR TO
INSTALLING PRODUCT and WATCHING VIDEOS

WARNING: Failure to follow these instructions may lead to serious personal injury and/or property damage.

Due to the extreme and punishing nature of offroad use, Raptor Performance Group has no implied or expressed warranty. Raptor Performance Group components are designed and manufactured for offroad use only. Installing most suspension products will raise the center of gravity of the vehicle and can increase the susceptibility to a rollover and alter the handling characteristics. Raptor Performance Group may void the vehicles warranty, check with your local dealer. The loss of use of the product, loss of time, inconvenience, removal, shipping costs, commercial loss or consequential damages are not covered. Raptor Performance Group reserves the right to change the design, material or specifications of any product without assuming any obligation to modify any product previously manufactured and without prior notice. Every effort has been made to avoid printing errors and specifications. By installing and/or using these products you are accepting these stated conditions and accept all liability and responsibility.

Prepared by: Engineering Innovations INC for RPG Offroad

RPG Offroad Inc.

Table Of Contents

1. General Information

1.1 Installation Information

1.2 For your Safety

1.3 Important Safety Precautions

1.4 Type of Installation

2.0 Removal of Original Parts

3.0 Installation of Kit

3.1 Install Adjustable Coil Spring Perch Collar

3.2 Install Shock

3.3 Attach Tie Rod

3.4 Attach UCA to Knuckle

3.5 Attach Brake, ABS and Vacuum Lines

3.6 Perform the same operation to the Passenger's Side

3.7 Install wheels and Tires

4.0 Inspection

5.0 Maintenance

1. General Information

The Kit is designed with the utmost consideration for safety, quality and ease of installation. The kit comes complete with all necessary hardware and fasteners. However, it is assumed that the installer has advanced/professional skills automotive vehicle servicing. It is recommended that installer obtain an OEM service manual for the vehicle.

1.1 Installation Information

The information contained in this Installation Guide is intended for use by technicians of advanced to professional skill levels. Attempting installation without the proper training, tools and equipment could cause injury to you or others. It could also damage the vehicle or cause an unsafe condition.

1.2 For Your Safety

Because this guide is intended for technicians of advanced to professional skill levels, we do not provide warnings about many basic shop safety practices. If you have not received shop safety training or do not feel confident about your knowledge of safety practices, we recommend that you do not attempt to perform the procedures described in this guide. Some of the most important general safety precautions are given below. Engineering Innovations cannot warn you of every conceivable hazard that can arise. Only you can decide whether or not you should perform a given task.

1.3 Important Safety Precautions

Make sure you have a clear understanding of all basic shop safety practices and that you wear appropriate clothing and use safety equipment. Be especially careful of the following:

- Read all directions before you begin, and make sure you have the tools, the parts and the skills required to perform the tasks safely and completely.
- Protect your eyes by using proper safety glasses, goggles or face shields anytime you hammer, drill, grind, pry or work around pressurized air or liquids, and springs or other stored-energy components.
- Use other protective wear when necessary, for example gloves or safety shoes. Handling hot or sharp parts can cause severe burns or cuts.
- Protect yourself and others when you have a vehicle up in the air. Anytime you lift a vehicle, either by hoist or a jack, make sure that it is securely supported.

Make sure the engine is turned off and battery disconnected before you begin work.

- Carbon Monoxide poisoning from exhaust gases: Be sure there is adequate ventilation whenever you run the engine.
- Burns from hot parts: Let the engine and exhaust system cool before working on those areas.
- Injury from moving parts: If running the engine, keep hands, fingers and clothing away from moving/rotating parts.

Gasoline vapor and hydrogen gases from batteries are explosive. To reduce the possibility of fire or explosion, be careful when working near gasoline and batteries.

Use only nonflammable solvent, not gasoline, to clean parts.

Never drain or store gasoline in an open container.

Keep all cigarettes, sparks or flame away from the battery and all fuel related parts.

1.4 Type of Installation.

- The installation of this kit requires the shock to be removed from the vehicle


2.0 Removal of Original Parts

See OEM manual for detailed instructions. Items to be retained for re-installation are noted.

- wheels and Tires (to be re-installed)
- To Simplify, perform this on the driver's side first
- Remove Brake Line ATTACHMENT BOLTS on Chassis and Knuckle. Performed only as a safety precautionary. Not necessary.
- Remove ABS and 4x4 Vacuum Line attachment bolts. Performed only as a safety precautionary. Not necessary.
- Vacuum line attached to the upper control arm. Cut the ZIP TIE. Be Careful to not cut the Vacuum Hose.
- Tie-Rod Outer Joint Only

Tie Rods

- Loosen Tie-Rod Nut 21mm or 13/16" socket. Do not remove completely.

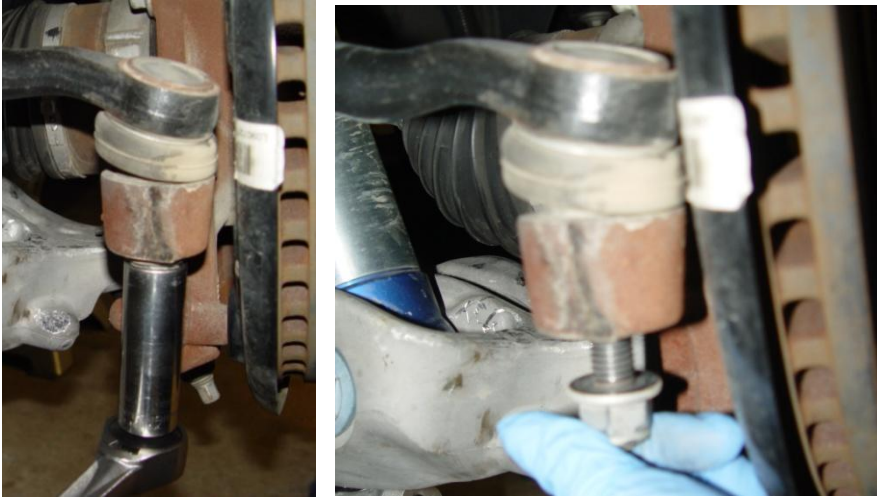

To Loosen, Tap on Knuckle and bottom of ball joint with Hammer



- Upper Control Arm to Knuckle Attachment
Stock Upper Control Arm to knuckle ball joint. Remove this using the same method as the OE stock Tie Rod. 18mm Nut
- Stock Shock removal.
 - loosen the lower shock nut (30mm) while holding the bolt (28mm or 1 1/16"). Note this bolt and nut are very tight from Ford. 406 Ft-lbs.
 - loosen the upper nuts (18mm) I have found that this is easier when using a ratcheting wrench
 - Remove Shock Absorber from vehicle

3.0 Installation of Kit

3.1 Install Adjustable Coil Spring Perch Collar

- Place Shock Absorber into Coil Spring Compressor



Remove top hat adaptor 15mm

Remove shock absorber from coil spring



Slide up and off the Jounce Stop (Foam)




Slide Plastic pieces up



Remove Live valve wire clips in lower spring perch



Slide up coil spring perch to expose retaining rings. This may require a soft hammer, be careful to not damage the aluminum.

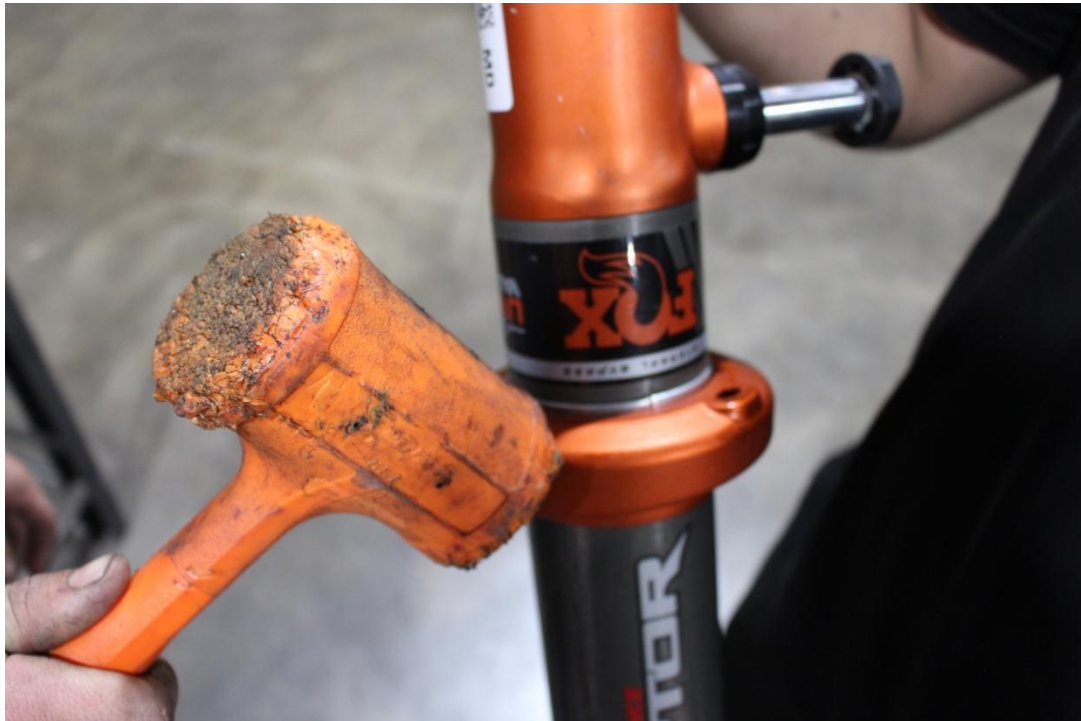

- Remove retaining rings.



- Slide lower spring perch up. May Require a Soft Dead Blow Hammer.
- Hold the Inner (Black) while rotating the outer (Orange)



- Remove outer Ring ONLY ORANGE with Spanner wrench.



- You may need to get be a little more assertive :)





- Tap the Lower Spring Perch off the rest of the way.



- Make sure that the snap ring groove is free and clear of debris or burrs



- Insert Spring perch collars into groove. NOTE when oriented correctly, the collars will cover the Fox sticker. (Bolts are on Top)



- Apply a small amount of thread locking compound onto the threads of the bolts supplied
- Insert bolts and thread evenly into the collars. Torque evenly to 75 inch - pounds.



- Locate the snap ring onto the desired location in spring perch collar.

- * Bottom groove for 1.0" Lift
- * Middle Grove for 2.25" Lift
- * Top Grove for 3.5" Lift

Please note that some vehicles may vary in increased vehicle ride heights. We have found that SCABs yield a slightly less increase in vehicle ride height when comparing to the SCREWS



- Slide Fox Spring Perch and RPG Outer Sleeve down to register onto RPG Spring Perch Collar and ensure that it is seated properly.




- Reassemble shock absorber and tighten orange ring to 91 Ft.-Lbs.



***** USE A COUPLE ZIP TIES TO KEEP LIVE VALVE WIRE FROM GETTING TANGLED IN THE COIL SPRING *****

3.2 Install Shock

LCA to Shock Bolt torque to 406 FOOT Pounds... yes that is correct. 406

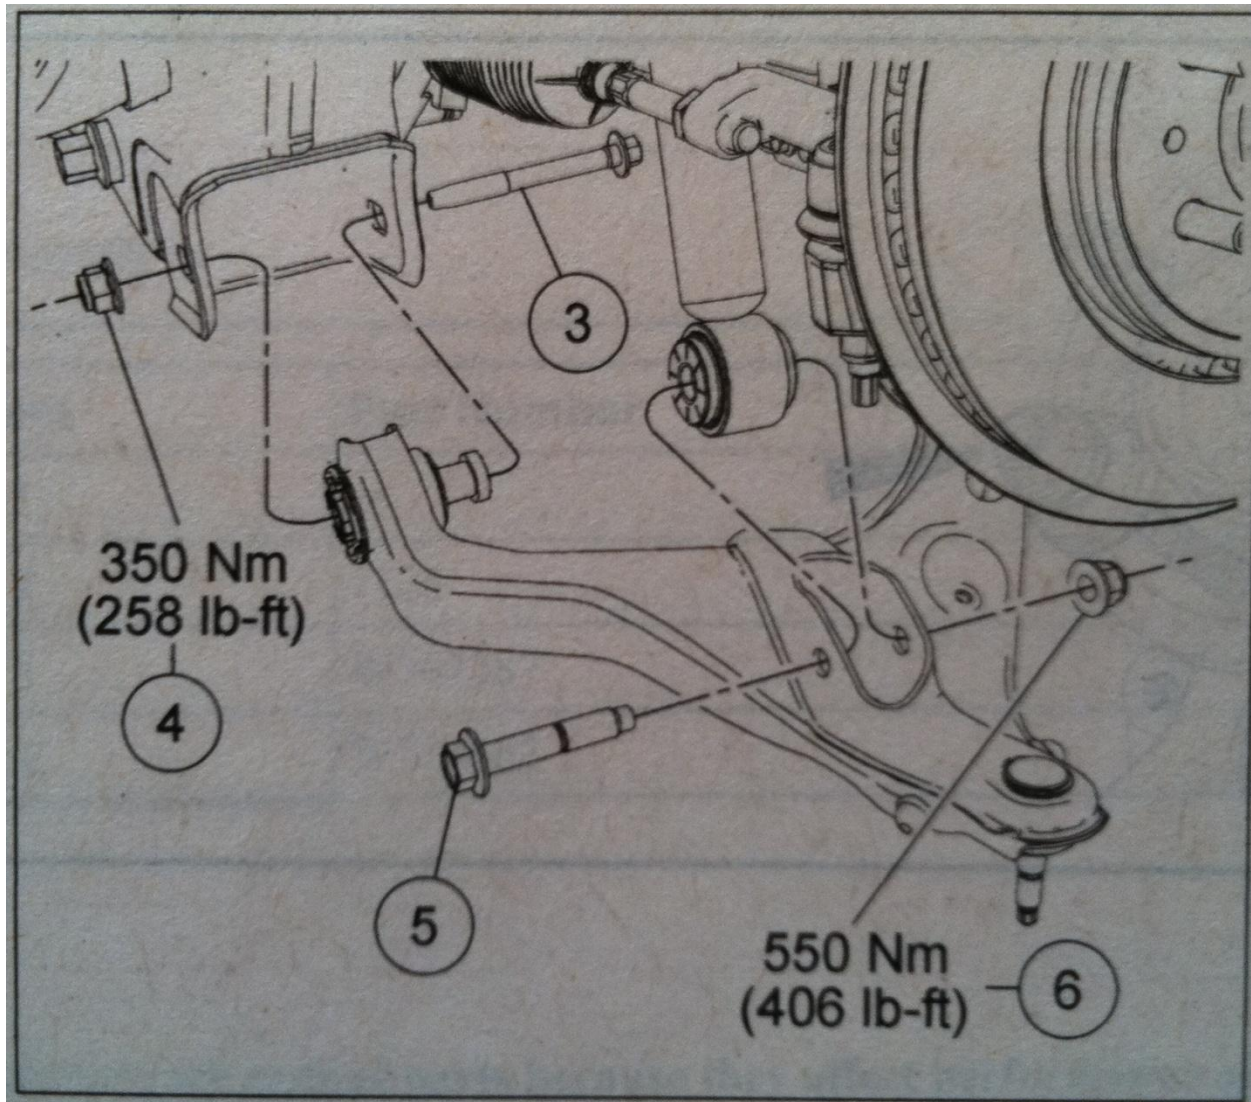


3.3 Attach Tie Rod

OE Tie Rods. Attach the outer tie rod to the knuckle and torque the nut down to 85 Foot Pounds. (13/16" or 21mm)

3.4 Attach UCA to Knuckle

OE Upper Control Arms. Attach the upper control arm to the knuckle and torque the nut down to 85 Foot Pounds. (18mm)

3.5 Attach Live Valve, Brake, ABS and Vacuum Lines

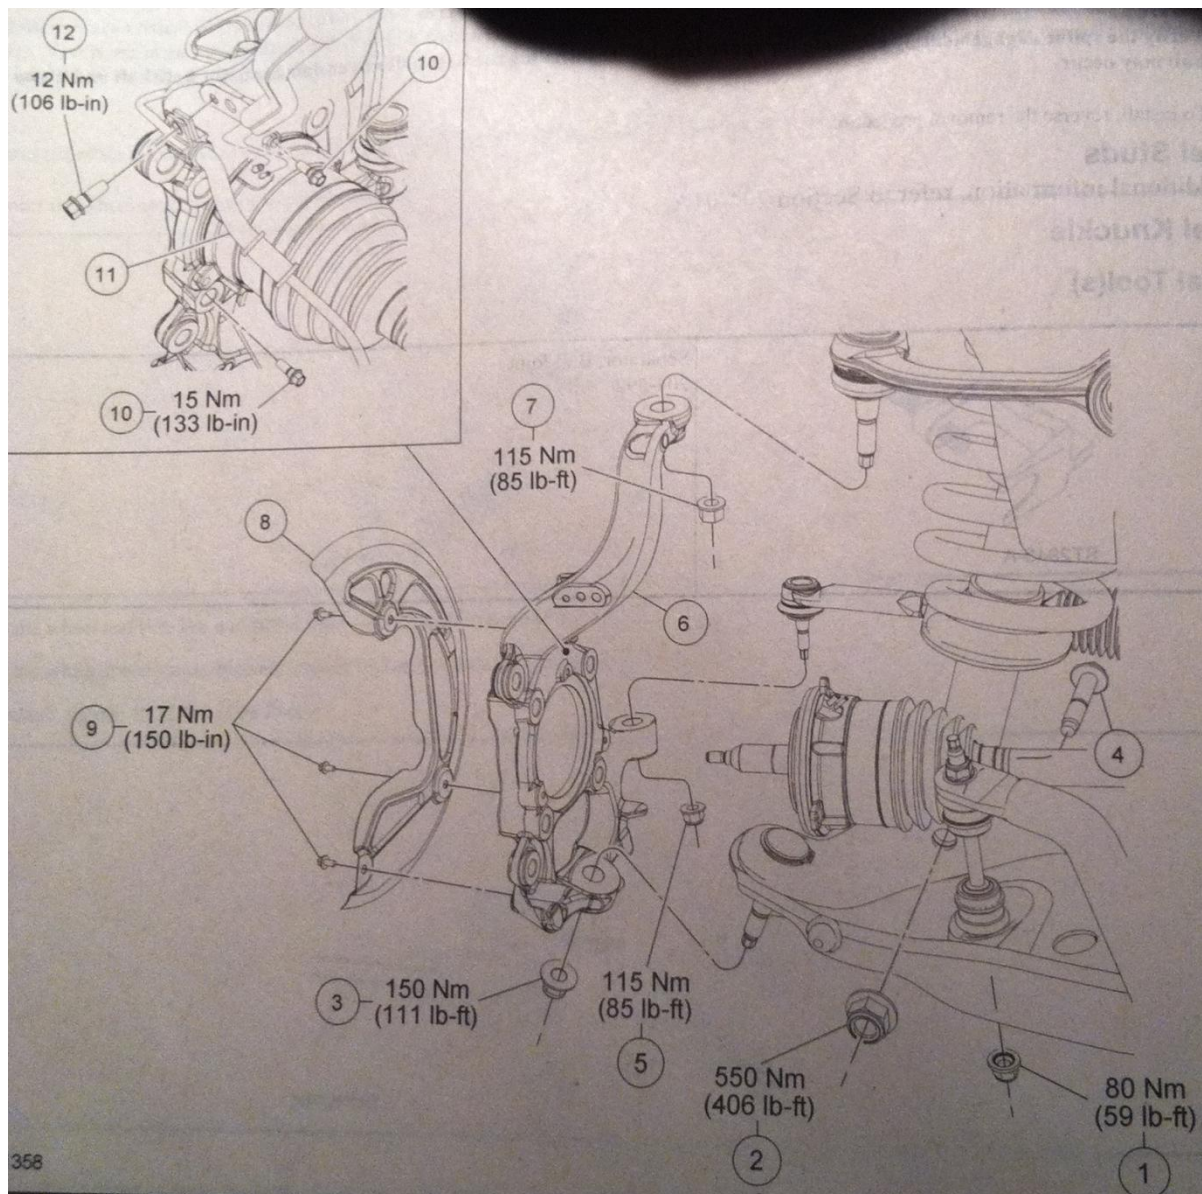

3.6 Perform the same operation to the Passenger's Side

3.7 Install wheels and tires, Torque to Factory Specification of 150 Foot-Pounds.

4.0 Inspection of complete installation.

5.0 Maintenance

Re-torque complete installation post - 100 - 500 miles of driving

- as per manufactures recommendations